

Parts



AnoFrame



Slatwall Hanger

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

Instructions for Hanging

Step 1

Insert hangers into upper portion of slatwall. **Fig. 1**

Note: To ensure that the frame hangs level use two hangers placed an equal distance in from each side of the frame.

Step 2

Hangers will rest on lower portion of slatwall. **Fig. 2**

Step 3

Place the AnoFrame on the hangers using the bottom channel of the top Ano rail. **Fig. 3**

Step 4

AnoFrame in position on slatwall. **Fig. 4**

Note: Available in either round or square profile.

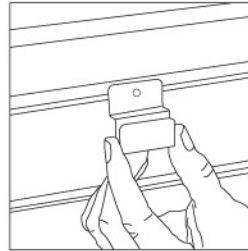


Figure 1

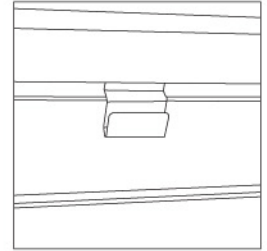


Figure 2

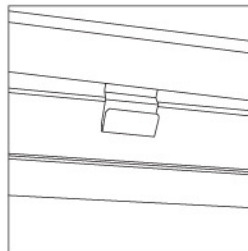


Figure 3

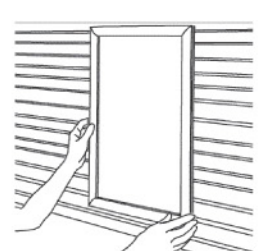


Figure 4