



Parts



Loop and Saucer

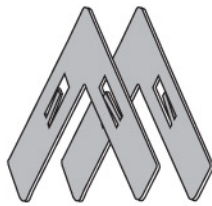


Corner brackets

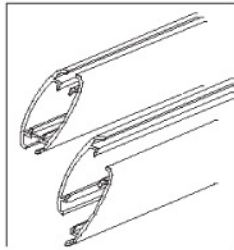

AnoFrame Round Rails

or

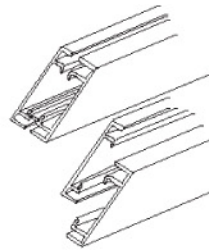

AnoFrame Square Rails



Cable Clips

Instructions for assembly

Step 1

Insert corner brackets into vertical AnoFrame sides. **Fig. 1 & Fig. 2.** Note: Assembly brackets tension tabs face towards outside of frames. Split rail side is made up of 2 separate pieces.

Step 2

Place cable onto inner channel of Cable Clip. The cable should snap into place. **Fig. 3**

Step 3

Align one end of the Cable Clip with the top channel of the aluminum holder. Then insert one round end, then press down on the other round end and slide Cable Clip into rail. **Fig. 4**

Step 4

Assemble frame following steps in. **Fig. 5** sliding sides together in the order shown.

Step 5

Insert poster. **Fig 6.**

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

