



Parts

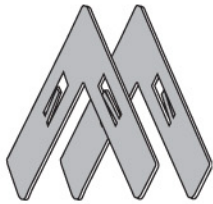


Corner brackets

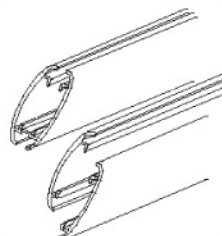

AnoFrame Round Rails

or

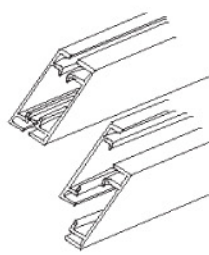

AnoFrame Square Rails



MultiClips

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

Instructions for assembly

Step 1

Insert corner brackets into vertical AnoFrame sides. **Fig. 1 & Fig. 2.** **Note:** Assembly brackets tension tabs face towards outside of frames. Split rail side is made up of 2 separate pieces.

Step 2

Squeeze sides of MultiClip together. **Fig. 3**

Step 3

Align the bottom rail of the MultiClip with the top channel of the aluminum holder. Slide MultiClip into rail. **Fig. 4** Repeat steps 2 & 3 for second MultiClip.

Step 4

Assemble frame following steps in. **Fig. 5** sliding sides together in the order shown.

Step 5

Insert poster. **Fig. 6.**

