



### Parts

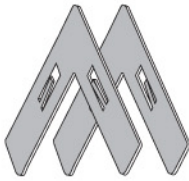


**Corner Brackets**

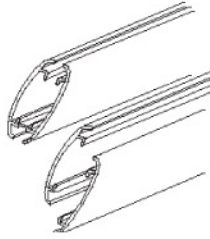


**AnoFrame Round Rails**

or

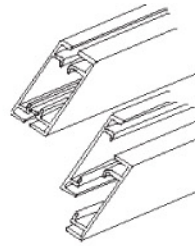

**AnoFrame Square Rails**

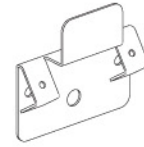

**Wall Mounting Hangers**



**Bottom Wall Hangers**

Instructions illustrate a side-load frame. Assembly steps are the same for top-load.

## Instructions For Hanging

### Step 1

Locate the two split rails and the solid rail that is the same length as the split rails. Insert corner brackets into side AnoFrame rails. Insert two corner brackets into each end of the solid side Ano rail. Insert one corner bracket into each end of each split side Ano rail. **Fig. 1 & Fig. 2**  
**Note:** Tension tabs on corner brackets face towards outside of frame.

### Step 2

Finish assembling frame by following sequence in **Fig. 3**.

### Step 3

Install wall mounting hangers using either nails or screw. Hammer nails into wall or use a Phillips head screwdriver for screws. **Fig. 4**

### Step 4

Slide AnoFrame onto wall mounting hangers. **Fig. 5**.

### Step 5

Install 2 bottom wall hangers using screws. This secures frame in place. **Fig. 6**

### Step 6

Insert poster. **Fig. 7**

