
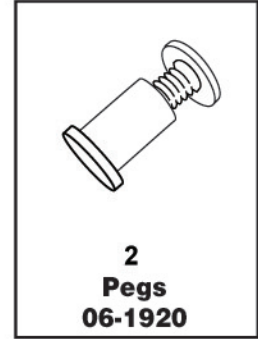
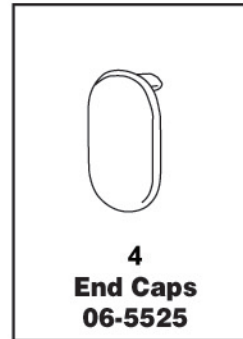
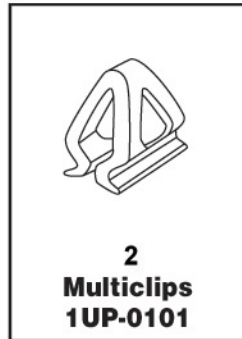


AnoQuick™ with Peg

Instruction Sheet

Parts

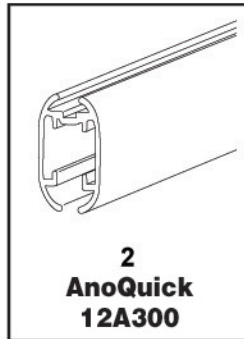

Instructions for Hanging

Step 1

Have your printer punch three holes, evenly spaced, along the top and bottom edges of your graphic. **Fig. 1**

Note: Make sure holes are evenly spaced.

Step 2

Push both parts of the peg together through each of the punched holes. **Fig. 2**

Step 3

Slide AnoQuick onto substrate. The pegs should slide into the side rails. **Fig. 3**

Note: This is the easiest way to safely hang heavier substrates.

Step 4

Squeeze sides of MultiClip together. **Fig. 4**
Align the bottom rail of the MultiClip with the top channel of the holder. Slide MultiClip into rail. **Fig. 5** Repeat step 3 for second MultiClip.

Step 5

Push end caps into place. **Fig. 6**

Step 6

Suspend poster. **Fig. 7**

