
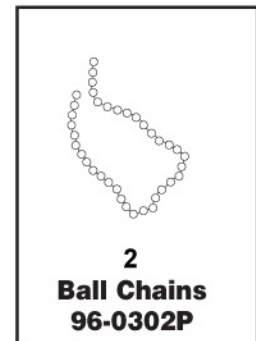
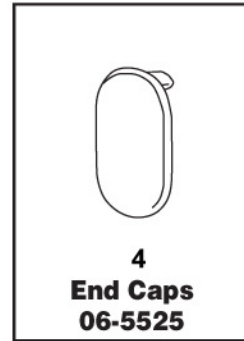
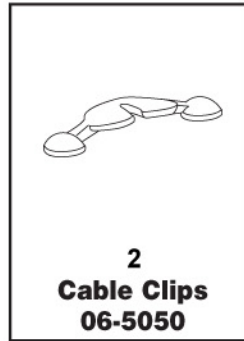


## Parts

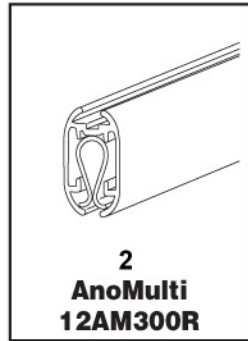

## Instructions for Hanging

### Step 1

Insert the poster into the Slim Holder by either sliding the poster into the holder or tapping the holder onto the poster. . Fig. 1

**Note:** For thinner substrates, it may be necessary to staple the edge of the graphic before inserting into Slim Holder.

### Step 2

Slide Slim holder into AnoMulti holder. Fig. 2

### Step 3

Insert single ball of ball chain into inner channel of Cable Clip. The cable should snap into place. Fig. 3

### Step 4

Align one round end of cable clip with top channel of the aluminum rail and insert. Once in place, insert end of ball chain into channel. Then press down on the other round end of the cable clip and slide into rail by pushing on the clip. Fig. 4

**Note:** Be sure to slide the ball chain into place by pushing on the cable clip. Do not pull on, or push against, the ball chain as this will cause it to bind in the channel.

### Step 5

Push end caps into place. Fig. 5

### Step 6

Suspend poster. Fig. 6

### Important note:

Please save and reuse the AnoMulti holder, End Caps, Cable Clips and MultiClips for future projects.

